

## How-to Guide

### Connect LevelLite sensor to a VDO gauge

If you are fitting a sensor and VDO gauge for the first time or replacing an existing sensor and connecting to a VDO gauge, here is how to connect everything up.

Please refer to Users Manual to;

Set Minimum to 4mA

Set Maximum to 10.5mA

220Ω resistor 0.25W across sensor output

